



QAC QR5 TEST PAPERS

QAC QR5 Test Paper is designed for use with multi-quat formulations (such as Oasis® 146) and provides results faster, more accurately, and less expensively than the current QAC 106 Test Paper.

PACKAGING OPTIONS


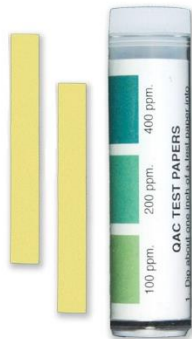
Available in packages of 12, 144 or 500 vials

For more information, please contact:

info@preclaboratories.com

Improved QUAT Test Papers

QAC 106 Test Paper (106)



100 ppm. 200 ppm. 400 ppm.

QAC TEST PAPERS

1. Dip about one inch of a test paper into the solution to be tested and hold there for 90 seconds.
2. Then compare the test paper color against the color standards shown above.

Precision Laboratories, Inc
800-733-0266
www.preclaboratories.com

NEW QAC QR5 Test Paper (106-QR5)



**100 Strips
PRECISION QAC QR5**

Use dry fingers to remove strip from vial. Remove one strip and dip strip for one second into solution to be tested. Allow 5 to 10 seconds to develop, then compare to color chart below.



0ppm 100ppm 200ppm 300ppm 400ppm

Precision Laboratories, Inc
800-733-0266
www.preclaboratories.com

Benefits of QAC QR5 vs QAC 106

- ✓ **Benefit #1: Reduced Cost** - Available in 12, 144, & 500 packs
- ✓ **Benefit #2: Faster Reaction Time** – 5-10 seconds versus 90 seconds
- ✓ **Benefit #3: Better Accuracy** – More standard values with better color separation. QAC QR5 has 5 color blocks versus 3 for QAC 106. QAC QR5 has increments at 0, 100, 200, 300, and 400 ppm. An alternative color chart with values at 0, 150, 200, 400, and 500 ppm is also available.